

# COMMERCIAL ENTERVAN®



 **THE BRAUN  
CORPORATION®**

# COMMERCIAL ENTERVAN®



The Braun Commercial Entervan® is the culmination of nearly forty years experience in building personal mobility products. Style, performance, convenience and safety have been aesthetically blended to achieve a new level of refinement in a wheelchair-accessible minivan.

The most striking feature is its handsomely finished automotive look. Both the passenger side and the driver side sliding doors have been lowered to match the low floor level with no sill or other obstructions to step over. This standard feature also allows for a better wheelchair turning radius, making it easier to maneuver while inside the vehicle. The Commercial Entervan® comes standard with a removable front driver and passenger seat, and a wheelchair securement position in the front passenger area.

Safety has always been a top priority at Braun. The Commercial Entervan® has been crash tested and certified to meet or exceed all applicable requirements of the Federal Motor Vehicle Safety Standards (FMVSS) and is backed by our three-year limited warranty.

## FEATURES

- Dodge Grand Caravan Chassis
- ADA, FMVSS and CMVSS Compliant
- Meets/exceeds Altoona test requirements
- CARB approved
- 7-passenger vehicle (with optional 2-passenger Fold-A-Way Seat)
- Lowered floor from firewall to rear axle
- Manual swing ramp providing 30" usable width
- Multiple wheelchair securement locations
- One belt system for wheelchair securement
- Manual driver and passenger side sliding door providing 56-1/4" vertical opening (ADA compliant), passenger door provides 31-1/2" in width
- Step-and-Roll front seats
- Roll and Tumble third row seating
- Vinyl flooring with 3/8" marine grade plywood underlayment
- 61" floor-to-ceiling at center of van\*
- Front passenger floor tracks for wheelchair securement, with 60" floor-to-ceiling height
- Stylized lower body panels with integrated steps
- ADA-compliant interlock
- ADA-compliant ramp and door entrance lighting
- Priority seat decal
- Wheelchair securement location decals
- 3-passenger bench seat at rear with folding footrest
- Auxiliary wiring harnesses include fused circuits
- Emergency rear hatch release
- Easy maintenance interior trim package
- 20 gallon OEM fuel tank

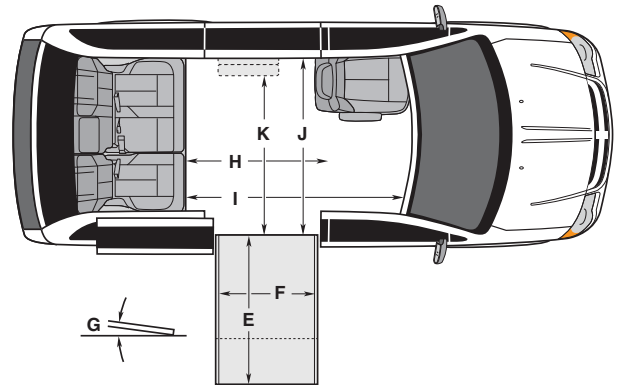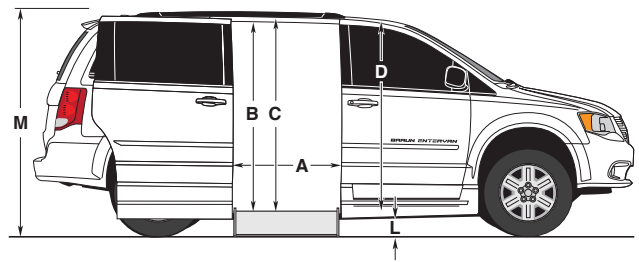

All dimensions are for reference only.

Door Opening Usable Width (Slide Door)	A	31-1/2"
Door Opening Usable Height (Slide Door)	B	56-1/4"
Interior Height at Center of Van*	C	61"
Interior Height at Driver and Passenger Position*	D	60"
Ramp Length	E	52"
Ramp Width (Usable Clear Opening)	F	30"
Ramp Angle (Unloaded)	G	12.5°
Interior Floor Length (Behind Front Seats)	H	57"
Overall Interior Floor Length (Flat Area)	I	87-1/2"
Interior Width at B-Pillars	J	62"
Width - Ramp to Optional 2-Pass. Seat (Folded)	K	49-3/4"
<sup>1</sup> Ground Clearance (Unloaded) - <sup>2</sup> Loaded @ 1200 lbs	L	<sup>1</sup> 6-1/4" - <sup>2</sup> 5"
Overall Vehicle Height (Unloaded)	M	74"

Due to manufacturing tolerances both with the OEM vehicle and the conversion components, all dimensions may vary slightly from those shown.

\* Deduct 3" off of Interior Height for Applications with Overhead DVD/Rear Heat & AC/Rail System



Visit our website or call for  
the nearest dealer location

**braunlift.com**  
**1-800-THE-LIFT**

